

50. Adjust the core of T_3 (less than $\pm 90^\circ$) for minimum distortion at the L or R output.
51. Turn the IF BAND switch to the WIDE position.
52. Adjust the VR_6 to reduce crosstalk between L and R to a minimum.
53. Turn the IF BAND switch to the NARROW position.
54. Adjust the VR_7 to reduce crosstalk between L and R to a minimum.

NOTE:

L_3 , L_4 and L_5 are coreless coils which may be adjusted by extending one turn of coil out towards the tuning capacitor (See Fig. 7-3).

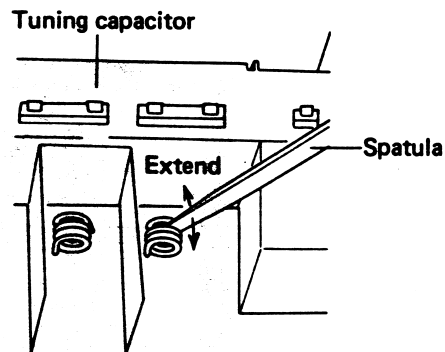


Fig. 7-3 Adjustment of tuning coil

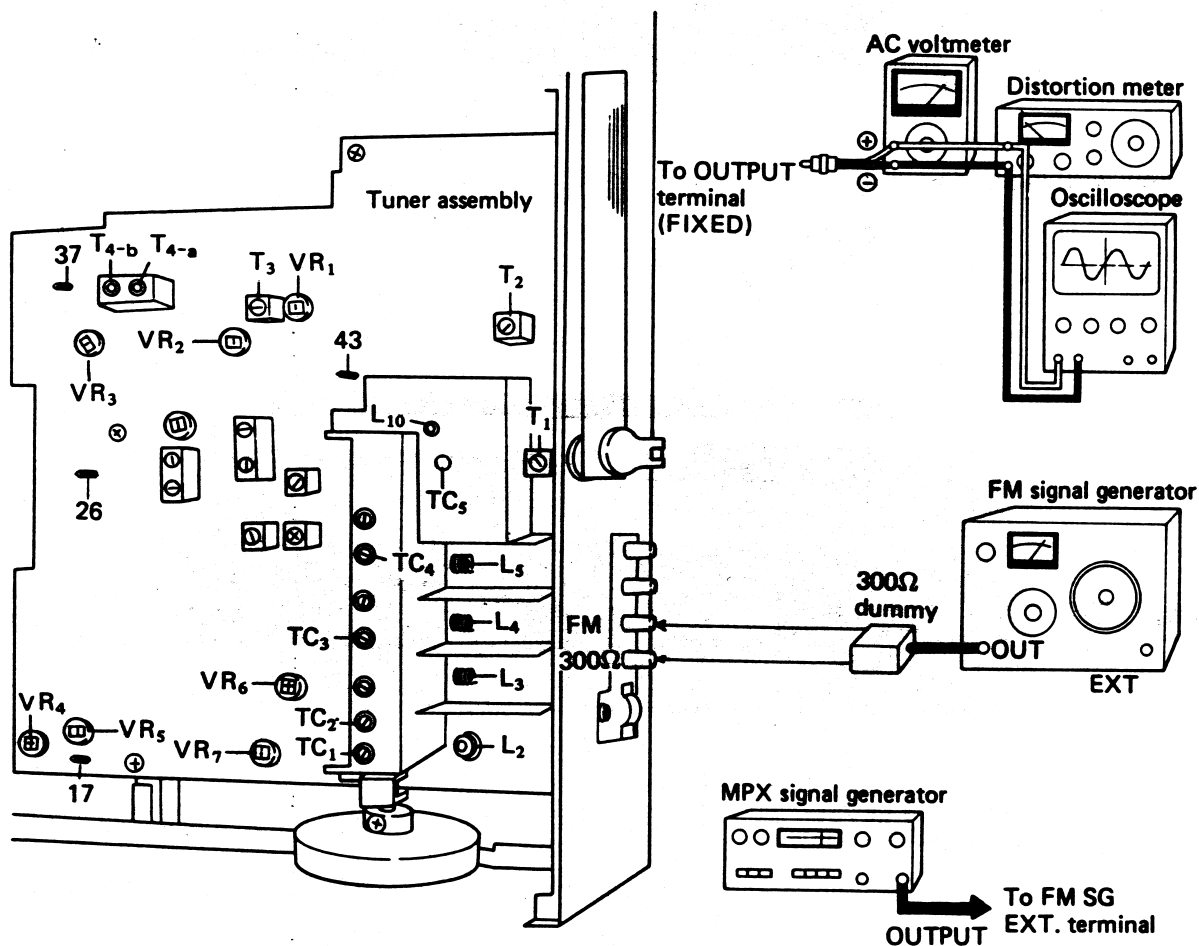


Fig. 7-4