


- S1 FUNCTION SW**
1. AM
  2. FM AUTO
  3. FM BLEND
  4. FM MONO
  5. REC. CAL.
- S3 HIGH FILTER**
1. 8 KHz
  2. OFF
  3. 4 KHz

- S2 MUTING SW**
1. ON 30 $\mu$ V
  2. ON 3 $\mu$ V
  3. OFF/CTS. OFF

- TR201, 202, 204, 205, 209~220, 222, 225, 226, 228~234, 236 : 2SC1918E or F or G  
 TR203, 206~208, 221, 223, 224, 227, 235, 237, 238 : 2SA844  
 TR239, 240 : 2SD400  
 TR241 : 2SA561 O, Y  
 IC201, 202 :  $\mu$ PC577H  
 IC203 : TA7136P  
 IC204 : LA3350
- D201~207, 209, 210 : 1S1555  
 D208, 211 : HZ-7B  
 D212, 213 : HZ-12C  
 D214, 215 : 1S1885  
 D216~218 : SLP132B

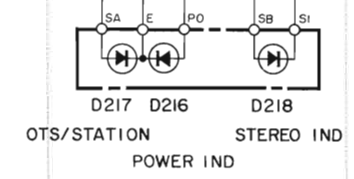

12V 60mA X3